


## HOW TO ADJUST THE BUZZER

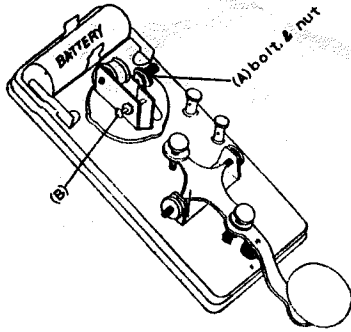

If the buzzer doesn't work, please re-adjust it according to the following instruction. Though the buzzer is factory adjusted, it is apt to be out of tune because of effects of transit.

Instruction.....

Please remove the round plastic cover of buzzer, and adjust the supporting bolt (B) to keep  $1\text{mm}$  interval between the magnet and diaphragm, and fix at the point with the nut.

Secondly, screw the adjustor (A) slowly into, until you get the maximum sound. When you reach the best tone, fix it with the round locking nut.

Printed in Japan

